


# HOME DECORATORS C O L L E C T I O N

BF-25231 AUSTELL HAMPER 33"Hx28.5"Wx13D

INV#19394

ASSEMBLY INSTRUCTIONS






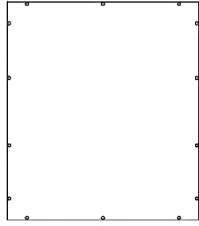






Made In China

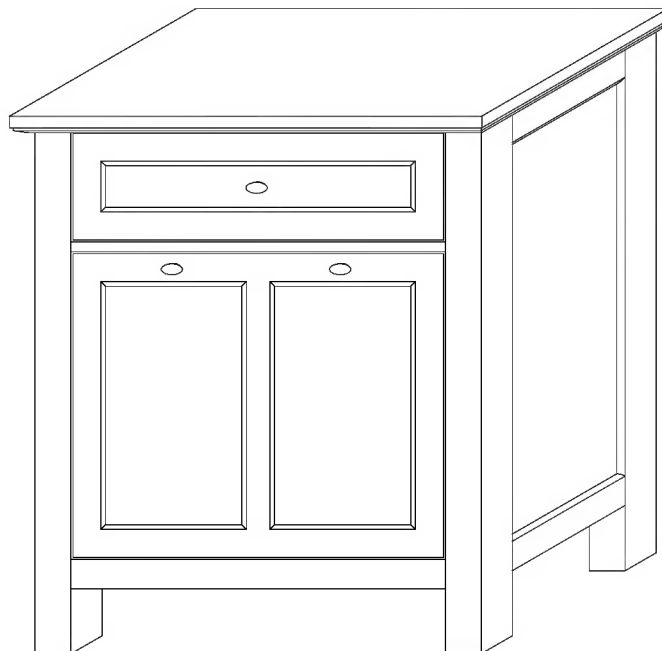


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

## PARTS LIST


<b>A</b>  TOP PANEL-1PC	<b>B</b>  LEFT SIDE PANEL-1PC	<b>C</b>  RIGHT SIDE PANEL-1PC
<b>D</b>  BOTTOM PANEL-1PC	<b>E</b>  FRONT PANEL-1PC	<b>F</b>  BACK PANEL-1PC
<b>G</b>  DRAWER PANEL FRONT-1PC	<b>H</b>  LEFT DRAWER PANEL SIDE-1PC	<b>I</b>  RIGHT DRAWER PANEL SIDE-1PC
<b>J</b>  DRAWER PANEL BOTTOM-1PC	<b>K</b>  DRAWER PANEL BACK-1PC	<b>L</b>  BUCKET FRONT PANEL-1PC

**M**


BUCKET STICK PANEL-1PC

**N**


BUCKET SIDE PANELS-2PCS

**O**


BUCKET BOTTOM PANEL-1PC

**P**


BUCKET BACK PANEL-1PC

**Q**


BUCKET SUPPORT PANEL-1PC

**R**

ACROSS PANEL-1PC

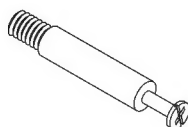**S**

CAM-BOLTS-14PCS

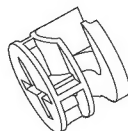**T**

CAM-LOCKS-14PCS

**U**

HANDLES-3PCS

**V**


8mm × 3/4"



SCREWS-6PCS

**W**

6mm × 1"




SCREWS-24PCS

**X**


6mm × 1/2"




SCREWS-10PCS

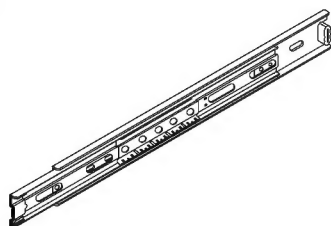**Y**


OUTER SLIDES-2PCS

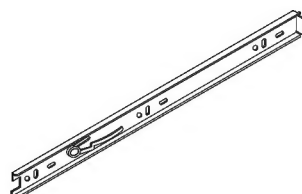**Z**

INNER SLIDES-2PCS

**A1**


HINGES-2PCS

**B1**

HOOKS-4PCS

**C1**

6mm × 3/4"




SCREWS-10PCS

**D1**

GECKOS-4PCS

**E1** 7mm × 7/8"



SCREWS-4PCS

**F1**




PLASTIC BELTS-2PCS

**G1**



DOWELS-4PCS

**H1**

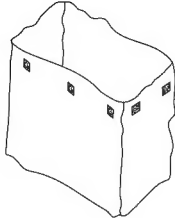

BAG-1PC


**I1**



CAM-TOOL-1PC


**J1**

7mm × 5/8"




SCREWS-14PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

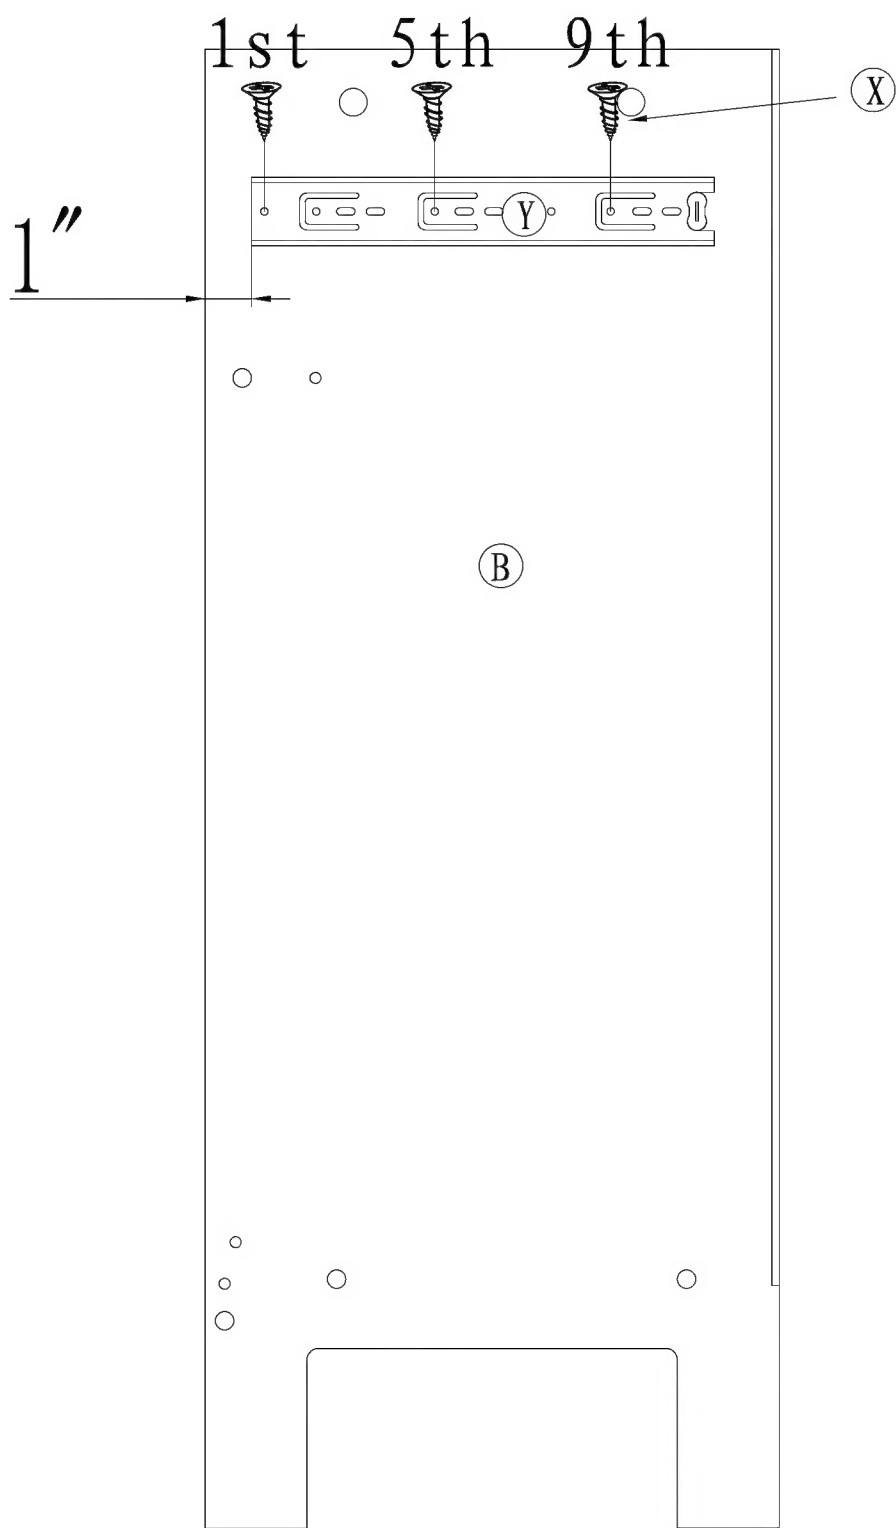


1). ASSEMBLE THE OUTER SLIDE(Y).

- ATTACH THE OUTER SLIDE(Y) TO LEFT SIDE PANEL(B) USING 3 SCREWS(X).

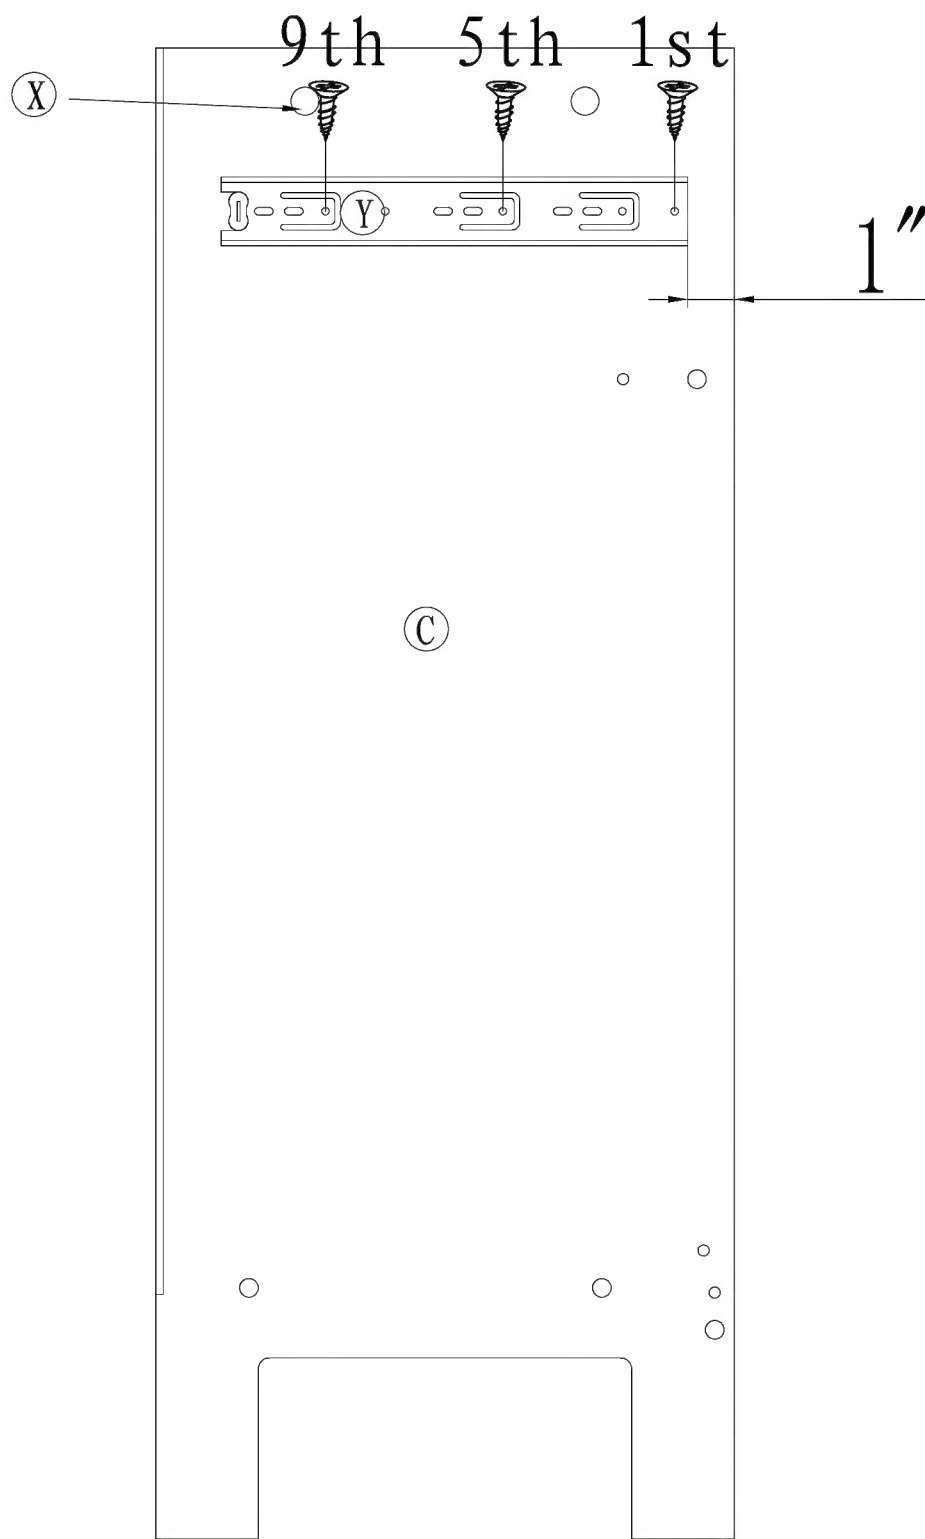


2). ASSEMBLE THE OUTER SLIDE(Y).

- ATTACH THE OUTER SLIDE(Y) TO RIGHT SIDE PANEL(C) USING 3 SCREWS(X).

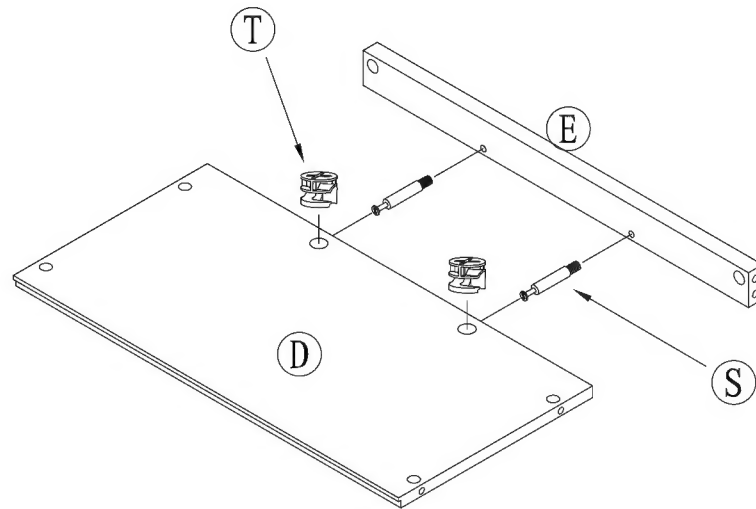


3). ASSEMBLE THE FRONT PANEL (E).

- ROTATE 2 CAM-BOLTS(S) INTO THE HOLES IN THE FRONT PANEL (E).
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE BOTTOM PANEL (D) AND ATTACH USING 2 CAM-LOCKS (T).

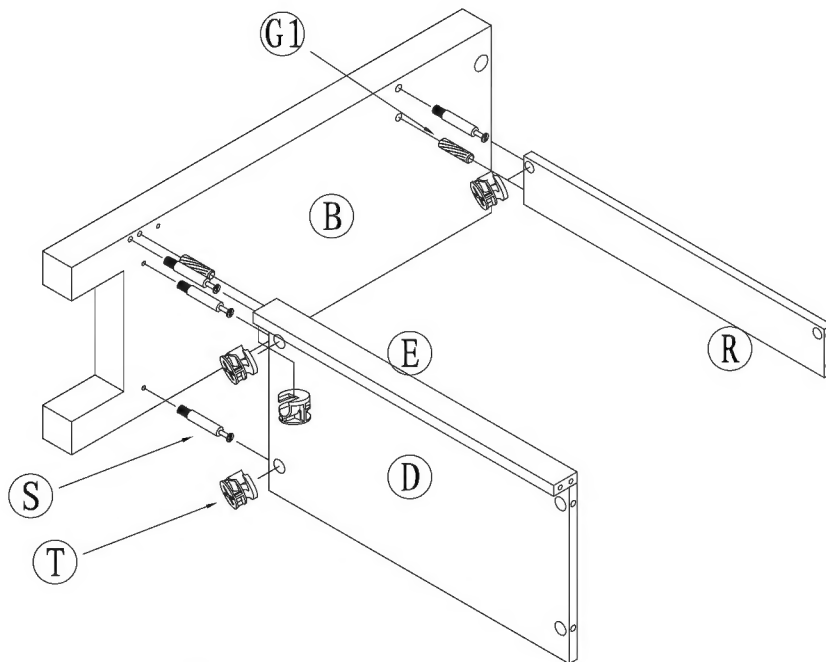


4). ASSEMBLE THE LEFT SIDE PANEL (B).

- ROTATE 4 CAM-BOLTS(S) AND INSERT 2 DOWELS(G1) INTO THE HOLES IN THE LEFT SIDE PANEL (B).
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL (D/E/R) AND ATTACH USING 4 CAM-LOCKS (T).

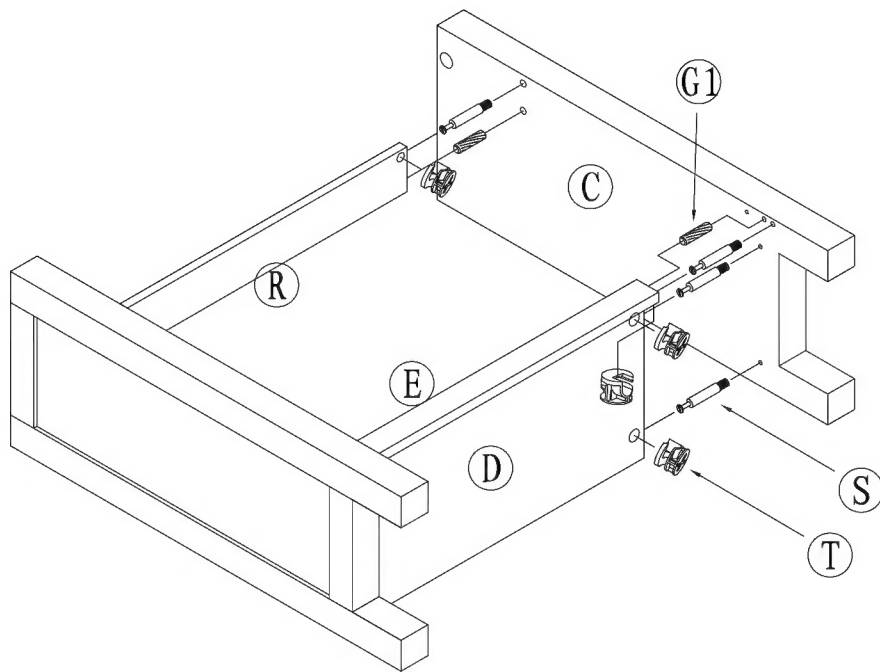

5). ASSEMBLE THE RIGHT SIDE PANEL(C).


- ROTATE 4 CAM-BOLTS(S) AND INSERT 2 DOWELS(G1) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL(D/E/R) AND ATTACH USING 4 CAM-LOCKS(T).

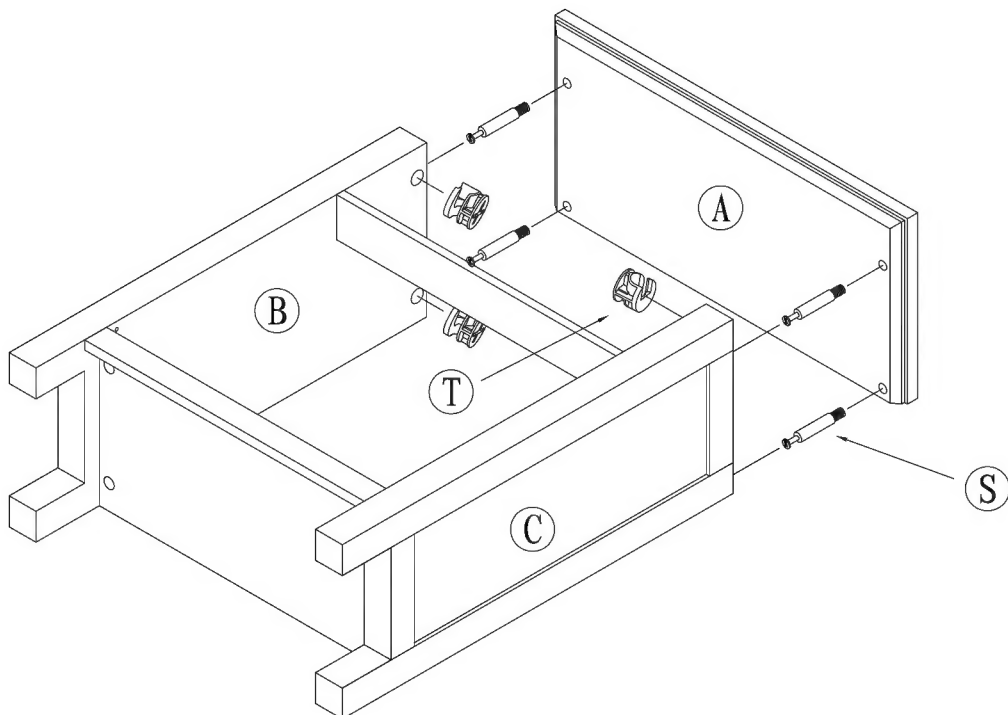

6). ASSEMBLE THE TOP PANEL(A).


- ROTATE 4 CAM-BOLTS(S) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(T).



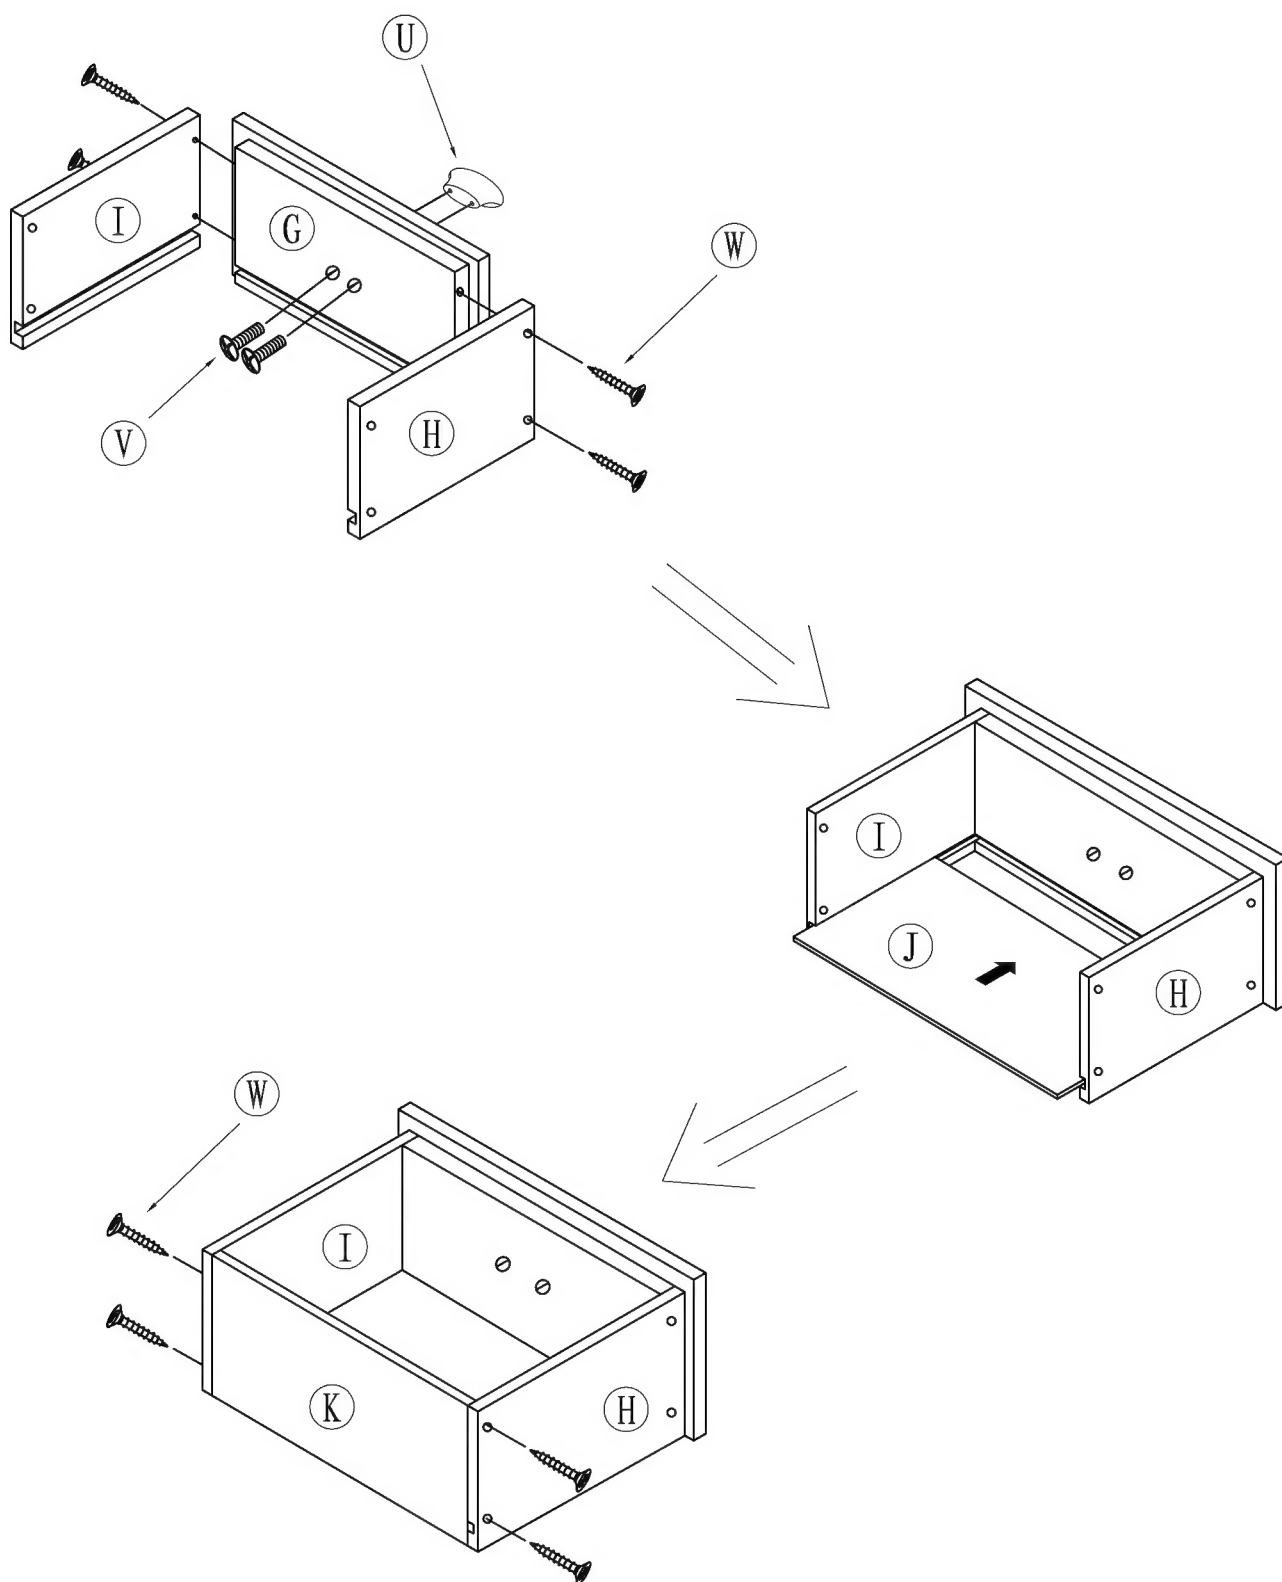


#### 7). ASSEMBLE THE DRAWER.

- ATTACH THE DRAWER PANEL SIDE(H/I) TO DRAWER PANEL FRONT(G) USING 4 SCREWS(W).
- ATTACH THE HANDLE(U) TO DRAWER PANEL FRONT(G) USING 2 SCREWS(V).
- INSERT THE DRAWER PANEL BOTTOM(J) INTO THE SLOT IN THE DRAWER PANEL SIDE(H/I).
- ATTACH THE DRAWER PANEL BACK(K) TO DRAWER PANEL SIDE(H/I) USING 4 SCREWS(W).

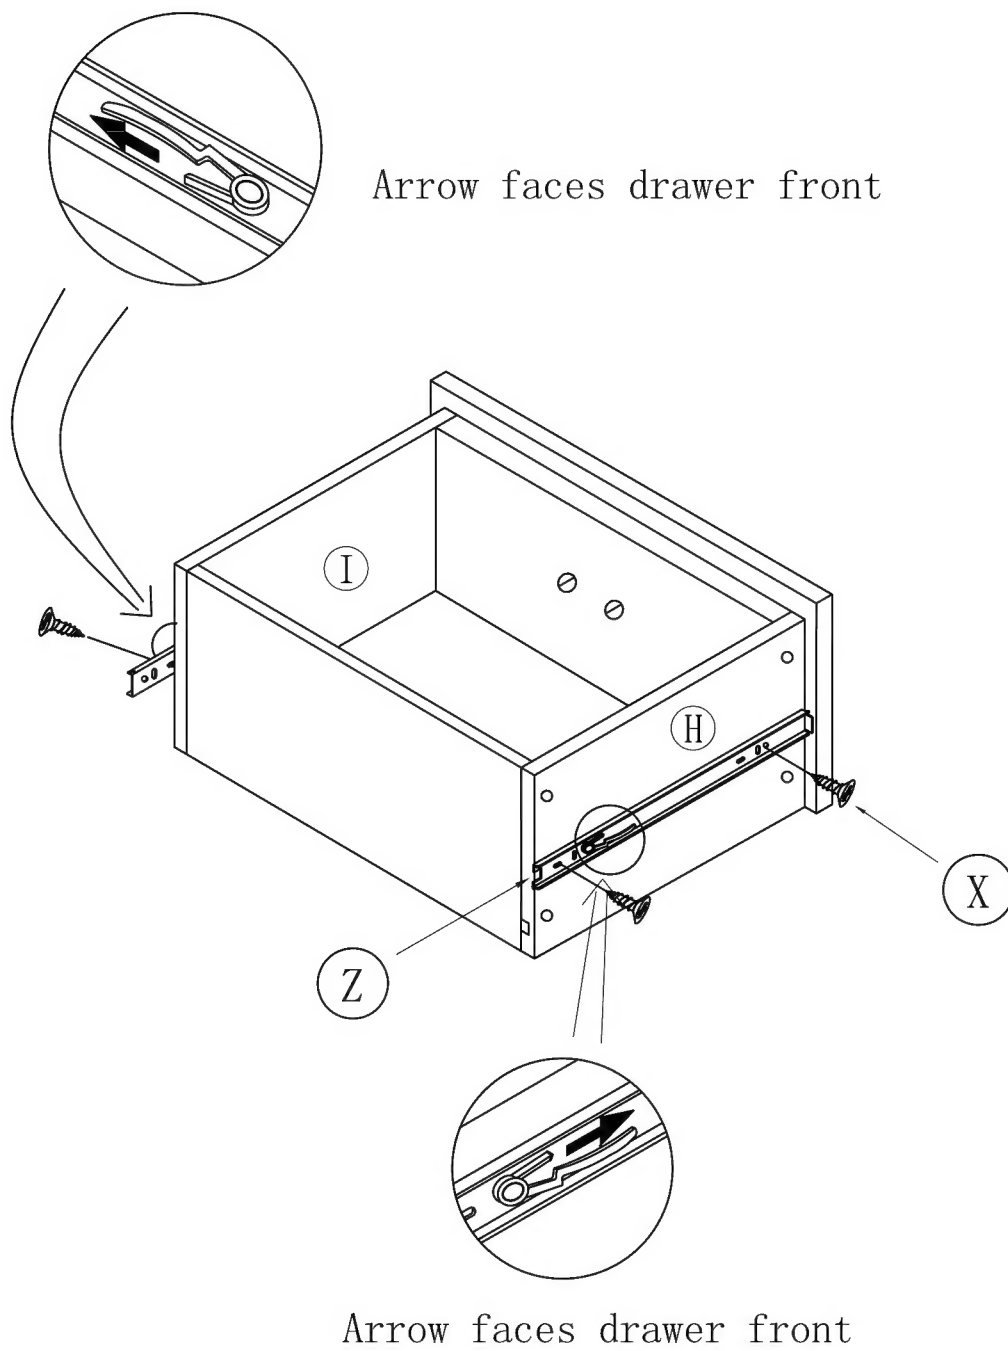


8). ASSEMBLE THE INNER SLIDERS (Z).

- ATTACH THE INNER SLIDES (Z) TO DRAWER PANEL SIDE (H/I) USING 4 SCREWS (X).

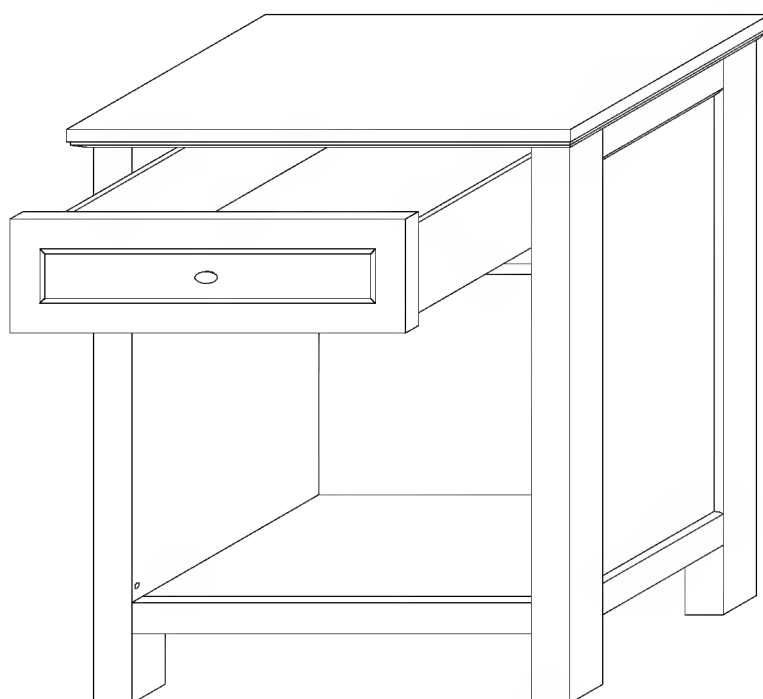


9). ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INTO THE SLIDES.

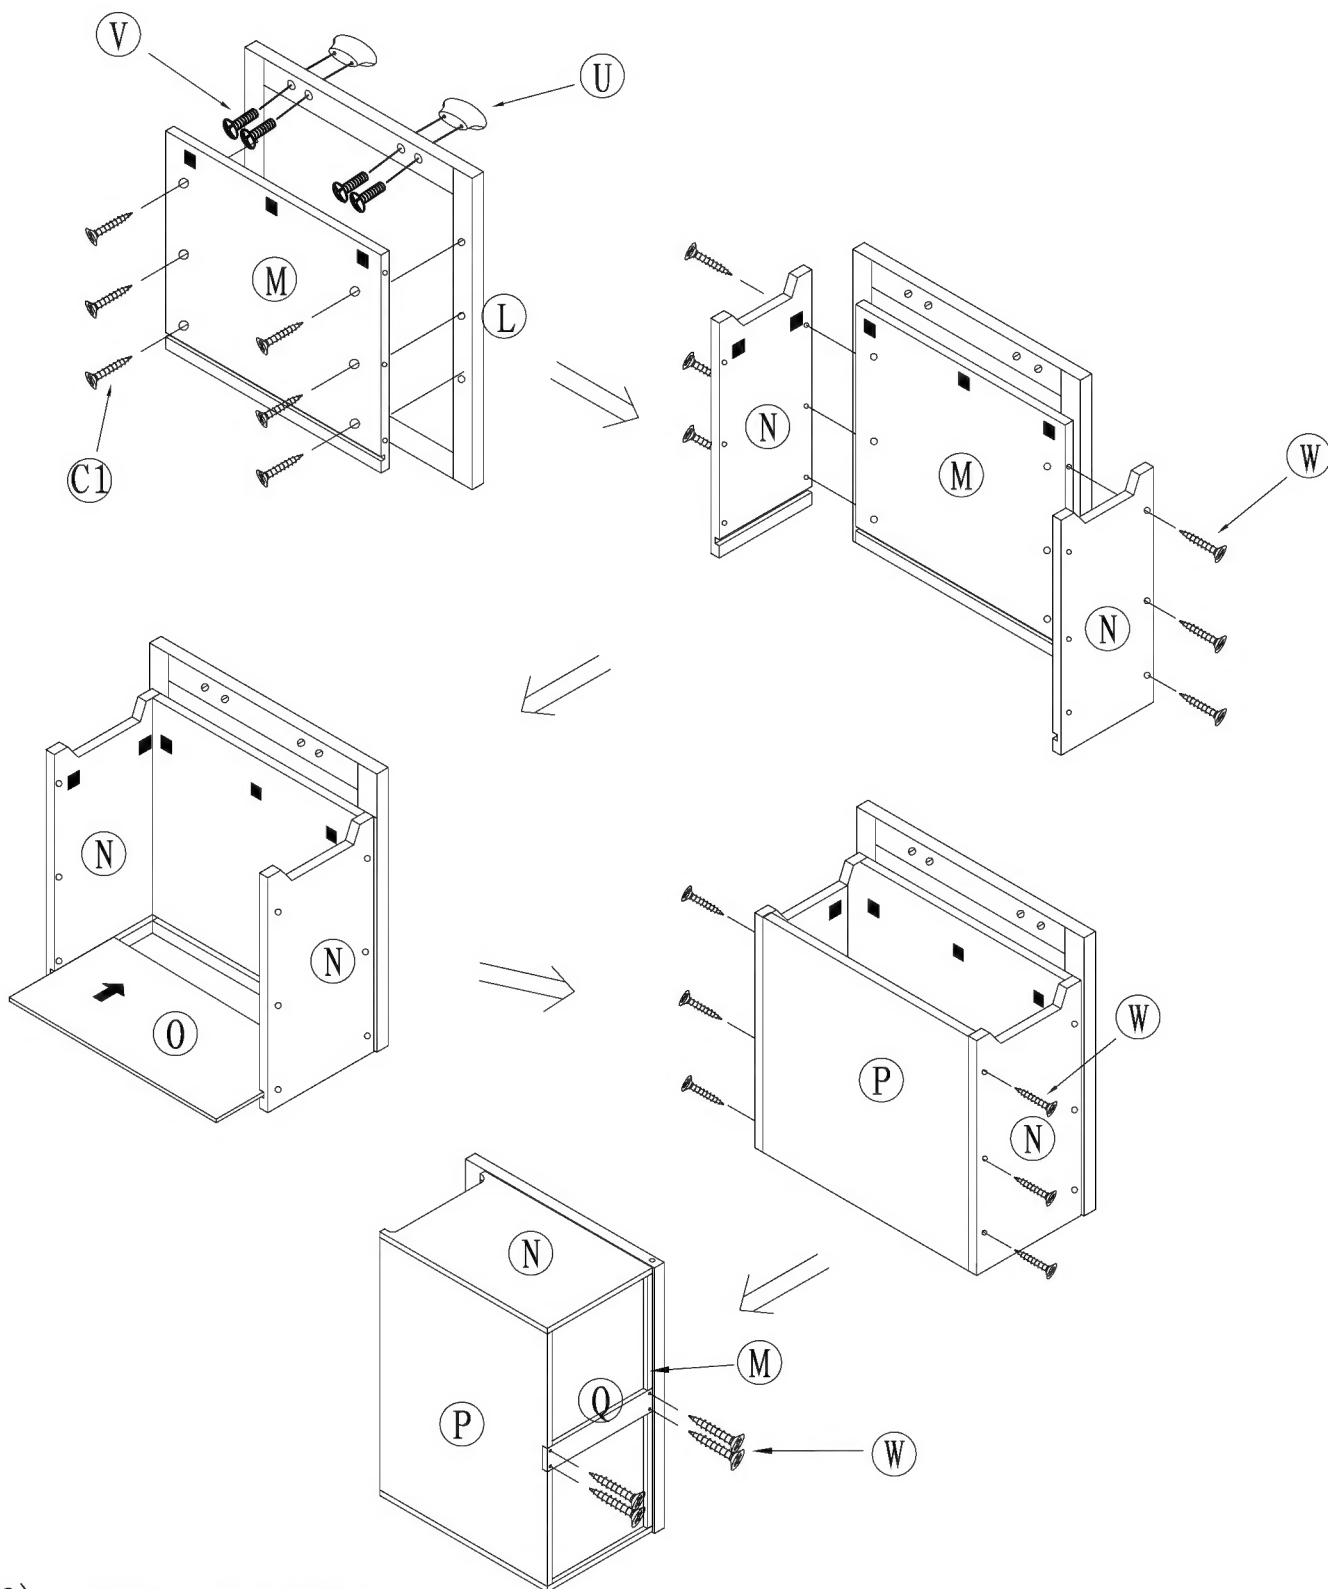


#### 10). ASSEMBLE THE BUCKET.

- ATTACH BUCKET STICK PANEL(M) TO BUCKET FRONT PANEL(L) USING 6 SCREWS(C1).
- ATTACH 2 HANDLES(U) TO BUCKET FRONT PANEL(L) USING 4 SCREWS(V).
- ATTACH THE BUCKET SIDE PANELS(N) TO BUCKET STICK PANEL(M) USING 6 SCREWS(W).
- INSERT BUCKET BOTTOM PANEL(O) INTO THE SLOT IN THE SIDE PANELS(N).
- ATTACH THE BUCKET BACK PANEL(P) TO BUCKET SIDE PANEL(N) USING 6 SCREWS(W).
- ATTACH THE BUCKET SUPPORT PANEL(Q) TO PANEL(M/P) USING 4 SCREWS(W).

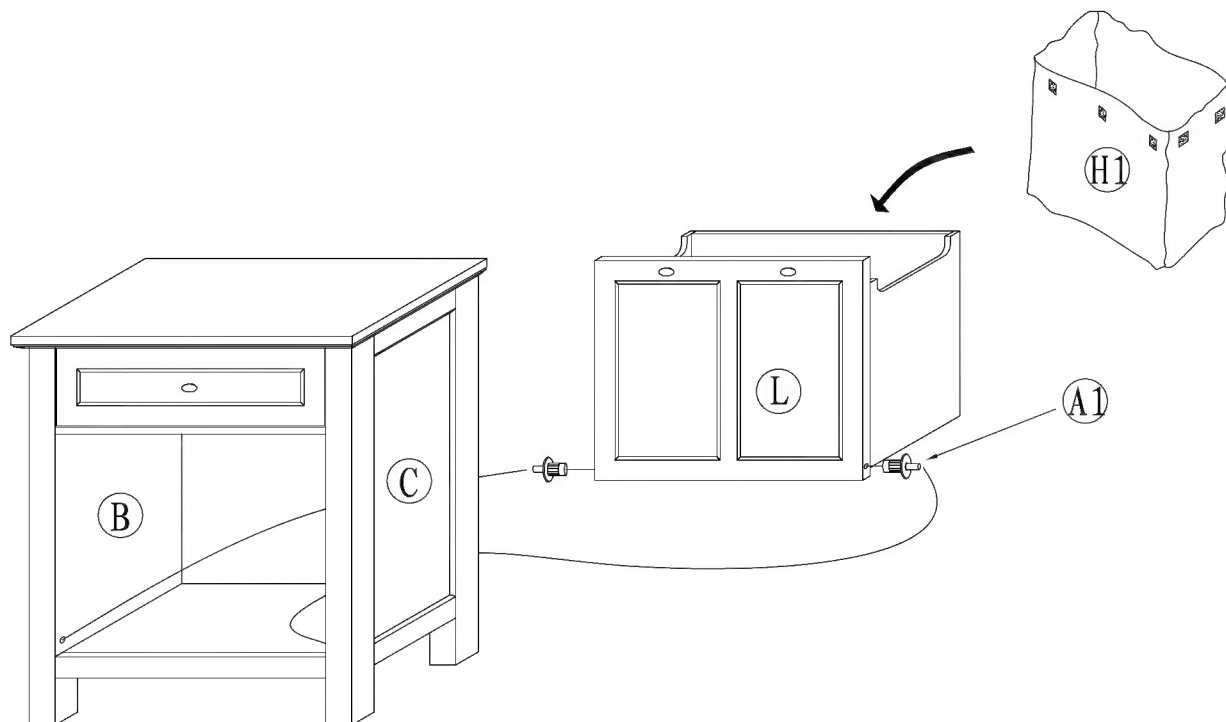

### 11). ASSEMBLE THE BUCKET.

- PUT THE BAG (H1) INTO THE BUCKET.
- INSERT THE HINGES (A1) INTO THE HOLES IN THE BUCKET FRONT PANEL (L).
- PLACE THE HINGES (A1) INTO THE HOLES IN THE SIDE PANEL (B/C).

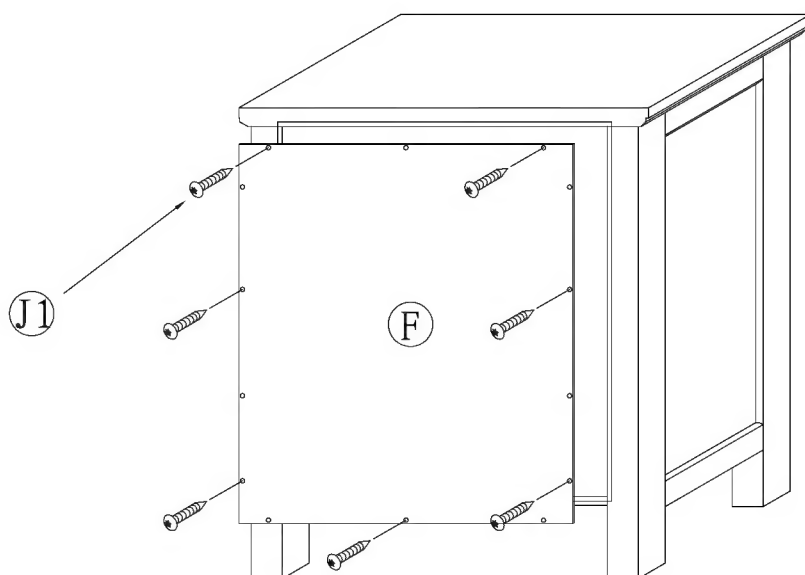


### 12). ASSEMBLE THE BACK PANEL (F).

- ATTACH THE BACK PANEL (F) USING 14 SCREWS (J1).




## Warning

The anti-tip hardware must be used as part of assembly!

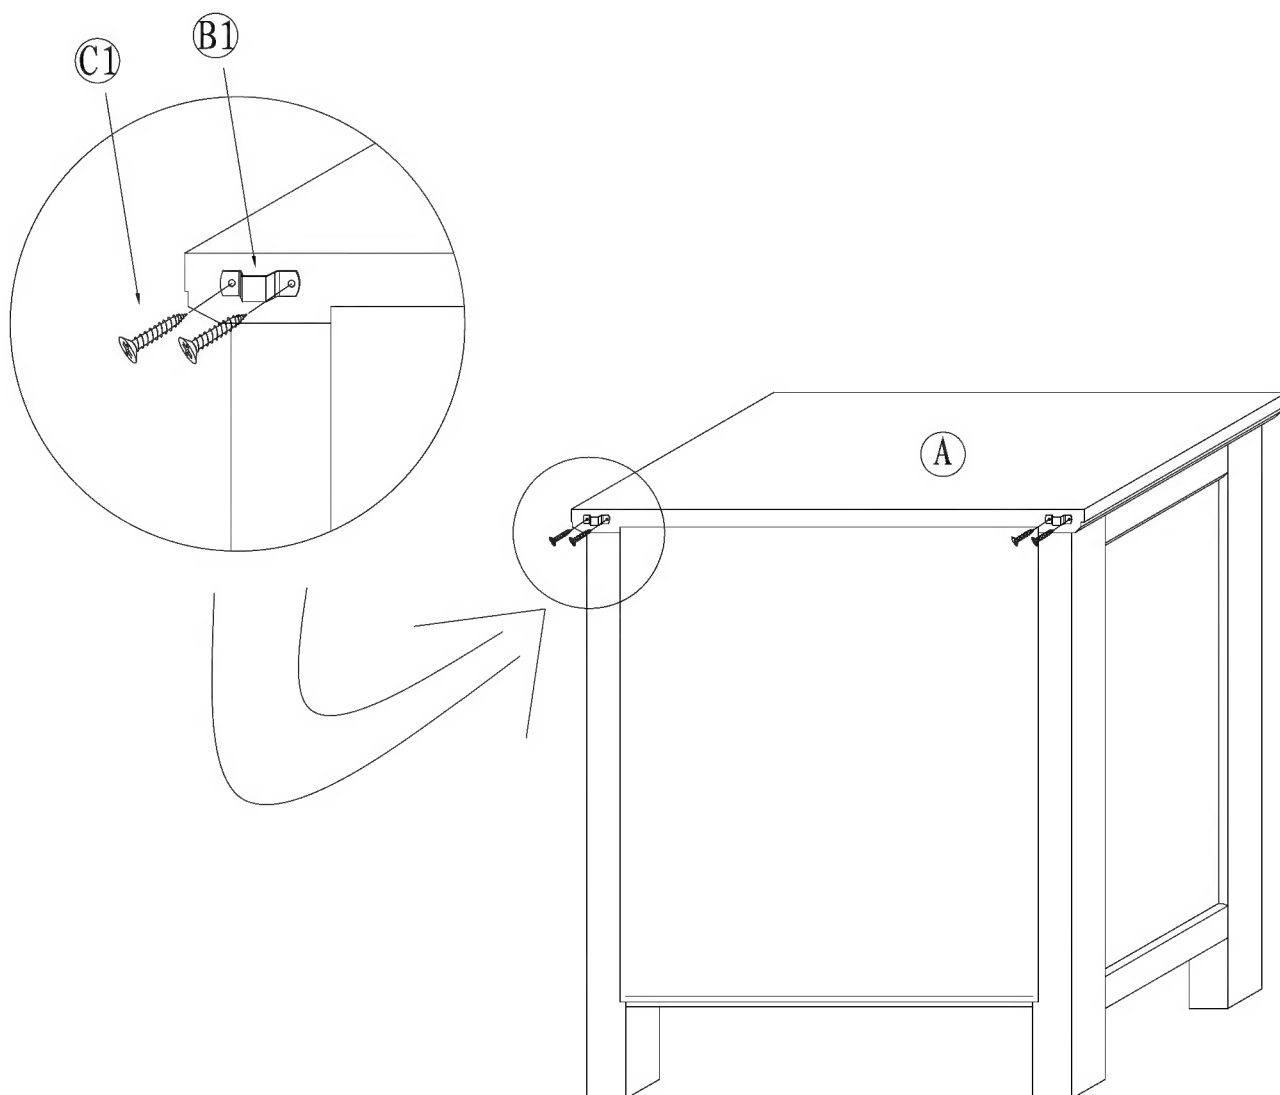

### 13). ASSEMBLE THE HOOKS (B1).

- ATTACH 2 HOOKS (B1) TO TOP PANEL (A) USING 4 SCREWS (C1).

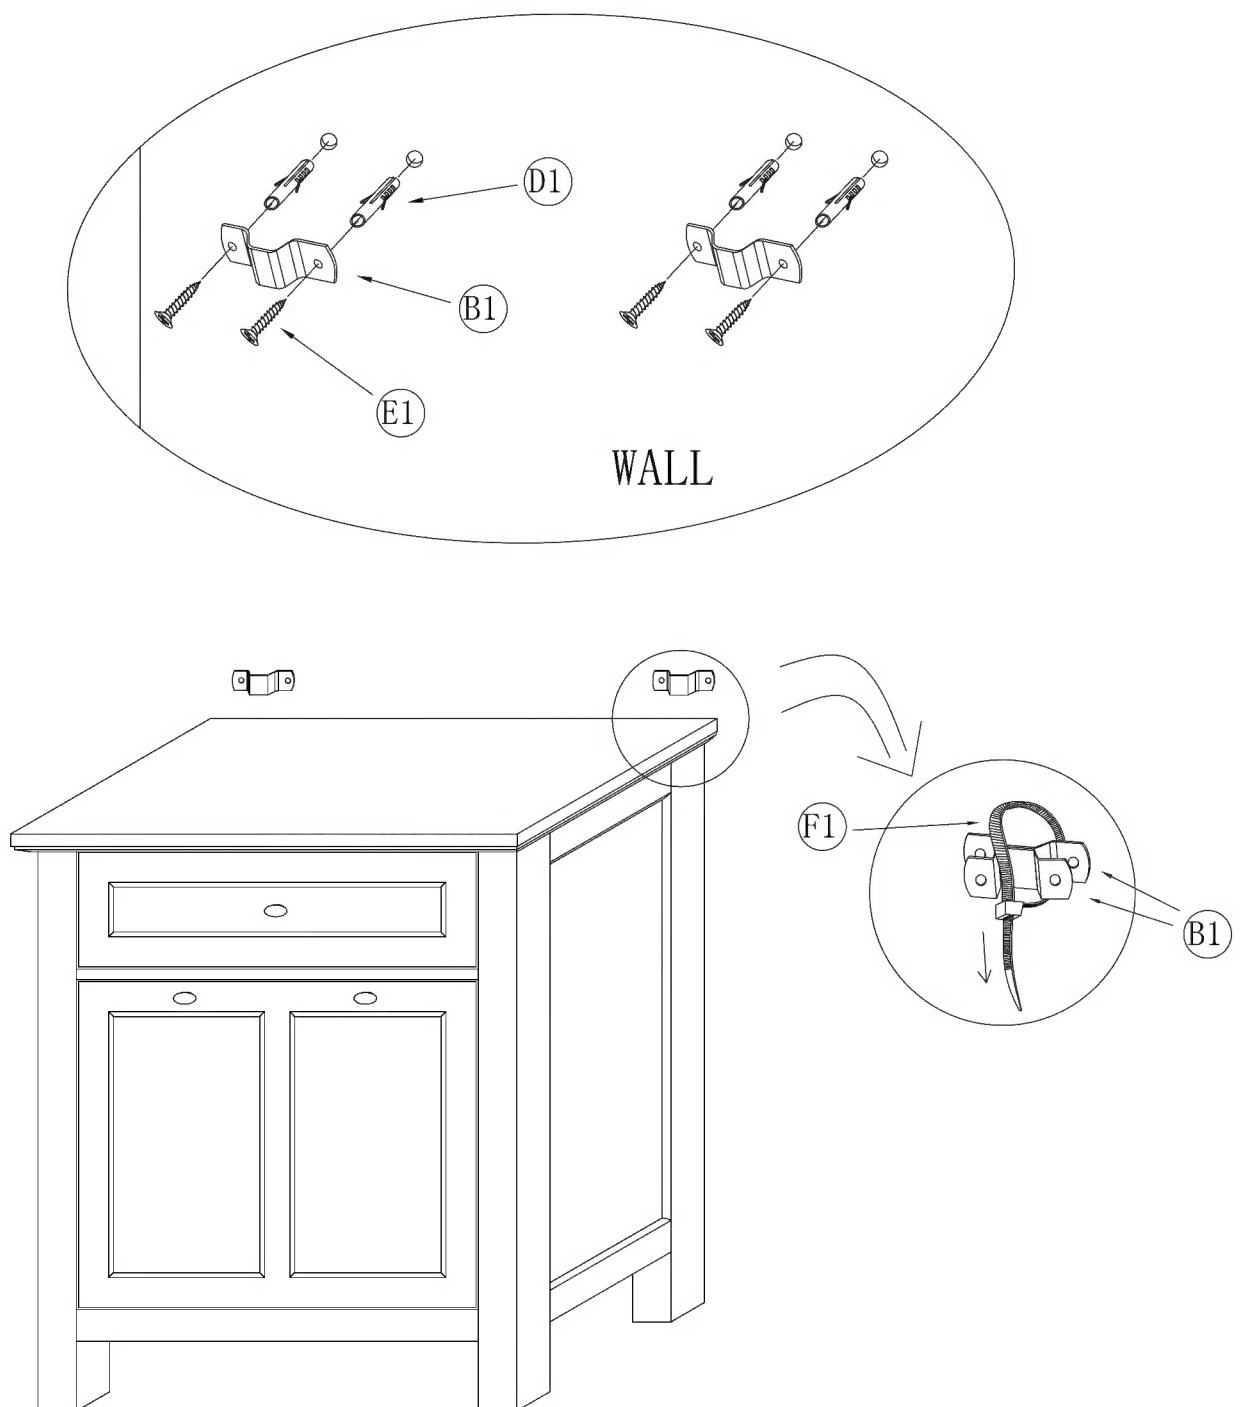

#### 14). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 4 GECKOS(D1) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS(E1) INTO THE GECKOS (D1).
- CONNECT THE TWO HOOKS(B1) WITH A PLASTIC BELT(F1).